

ASSEMBLY GUIDE

Step-by-step instructions for building your
dining & living room set



THANK YOU

Thank you for choosing our dining & living room set. This guide walks you through the assembly step by step.

Take your time, the parts are designed to click together with dovetail connectors, no tools required.

A few things to know before you start:

- Color-matched connectors: each connector matches the color of the part it joins (black for the floor, white for the walls), so they stay hidden once assembled.
- Modular & expandable: this set is designed to grow. Additional floor tiles, walls, and corner pieces can be added later to extend or reconfigure your room.
- Optional extra strength: the connectors hold everything firmly on their own. For a permanent build, a small amount of glue in the connector slots adds extra durability.

Questions or missing parts? Get in touch, we're happy to help!



STEP 1

CONNECT THE FLOOR PANELS

Place both floor panels face-down. Join the two panels along their shared edge, then fit a connector into every dovetail slot around the outer edges. Leave only the slots along the seam where the two floors meet.

Instruction: Insert a connector into each bow-tie slot on the outer edges. Skip the joining seam between the two panels. Use the connectors that match the color of the floor's underside.




STEP 2

FLIP THE FLOOR OVER

Turn the connected floor over so the front side faces up. The two panels now form one continuous floor, with the connectors hidden underneath and their tabs sticking out along the edges.

Instruction: Flip the assembled floor face-up and check that the seam sits flush and the panels are aligned.

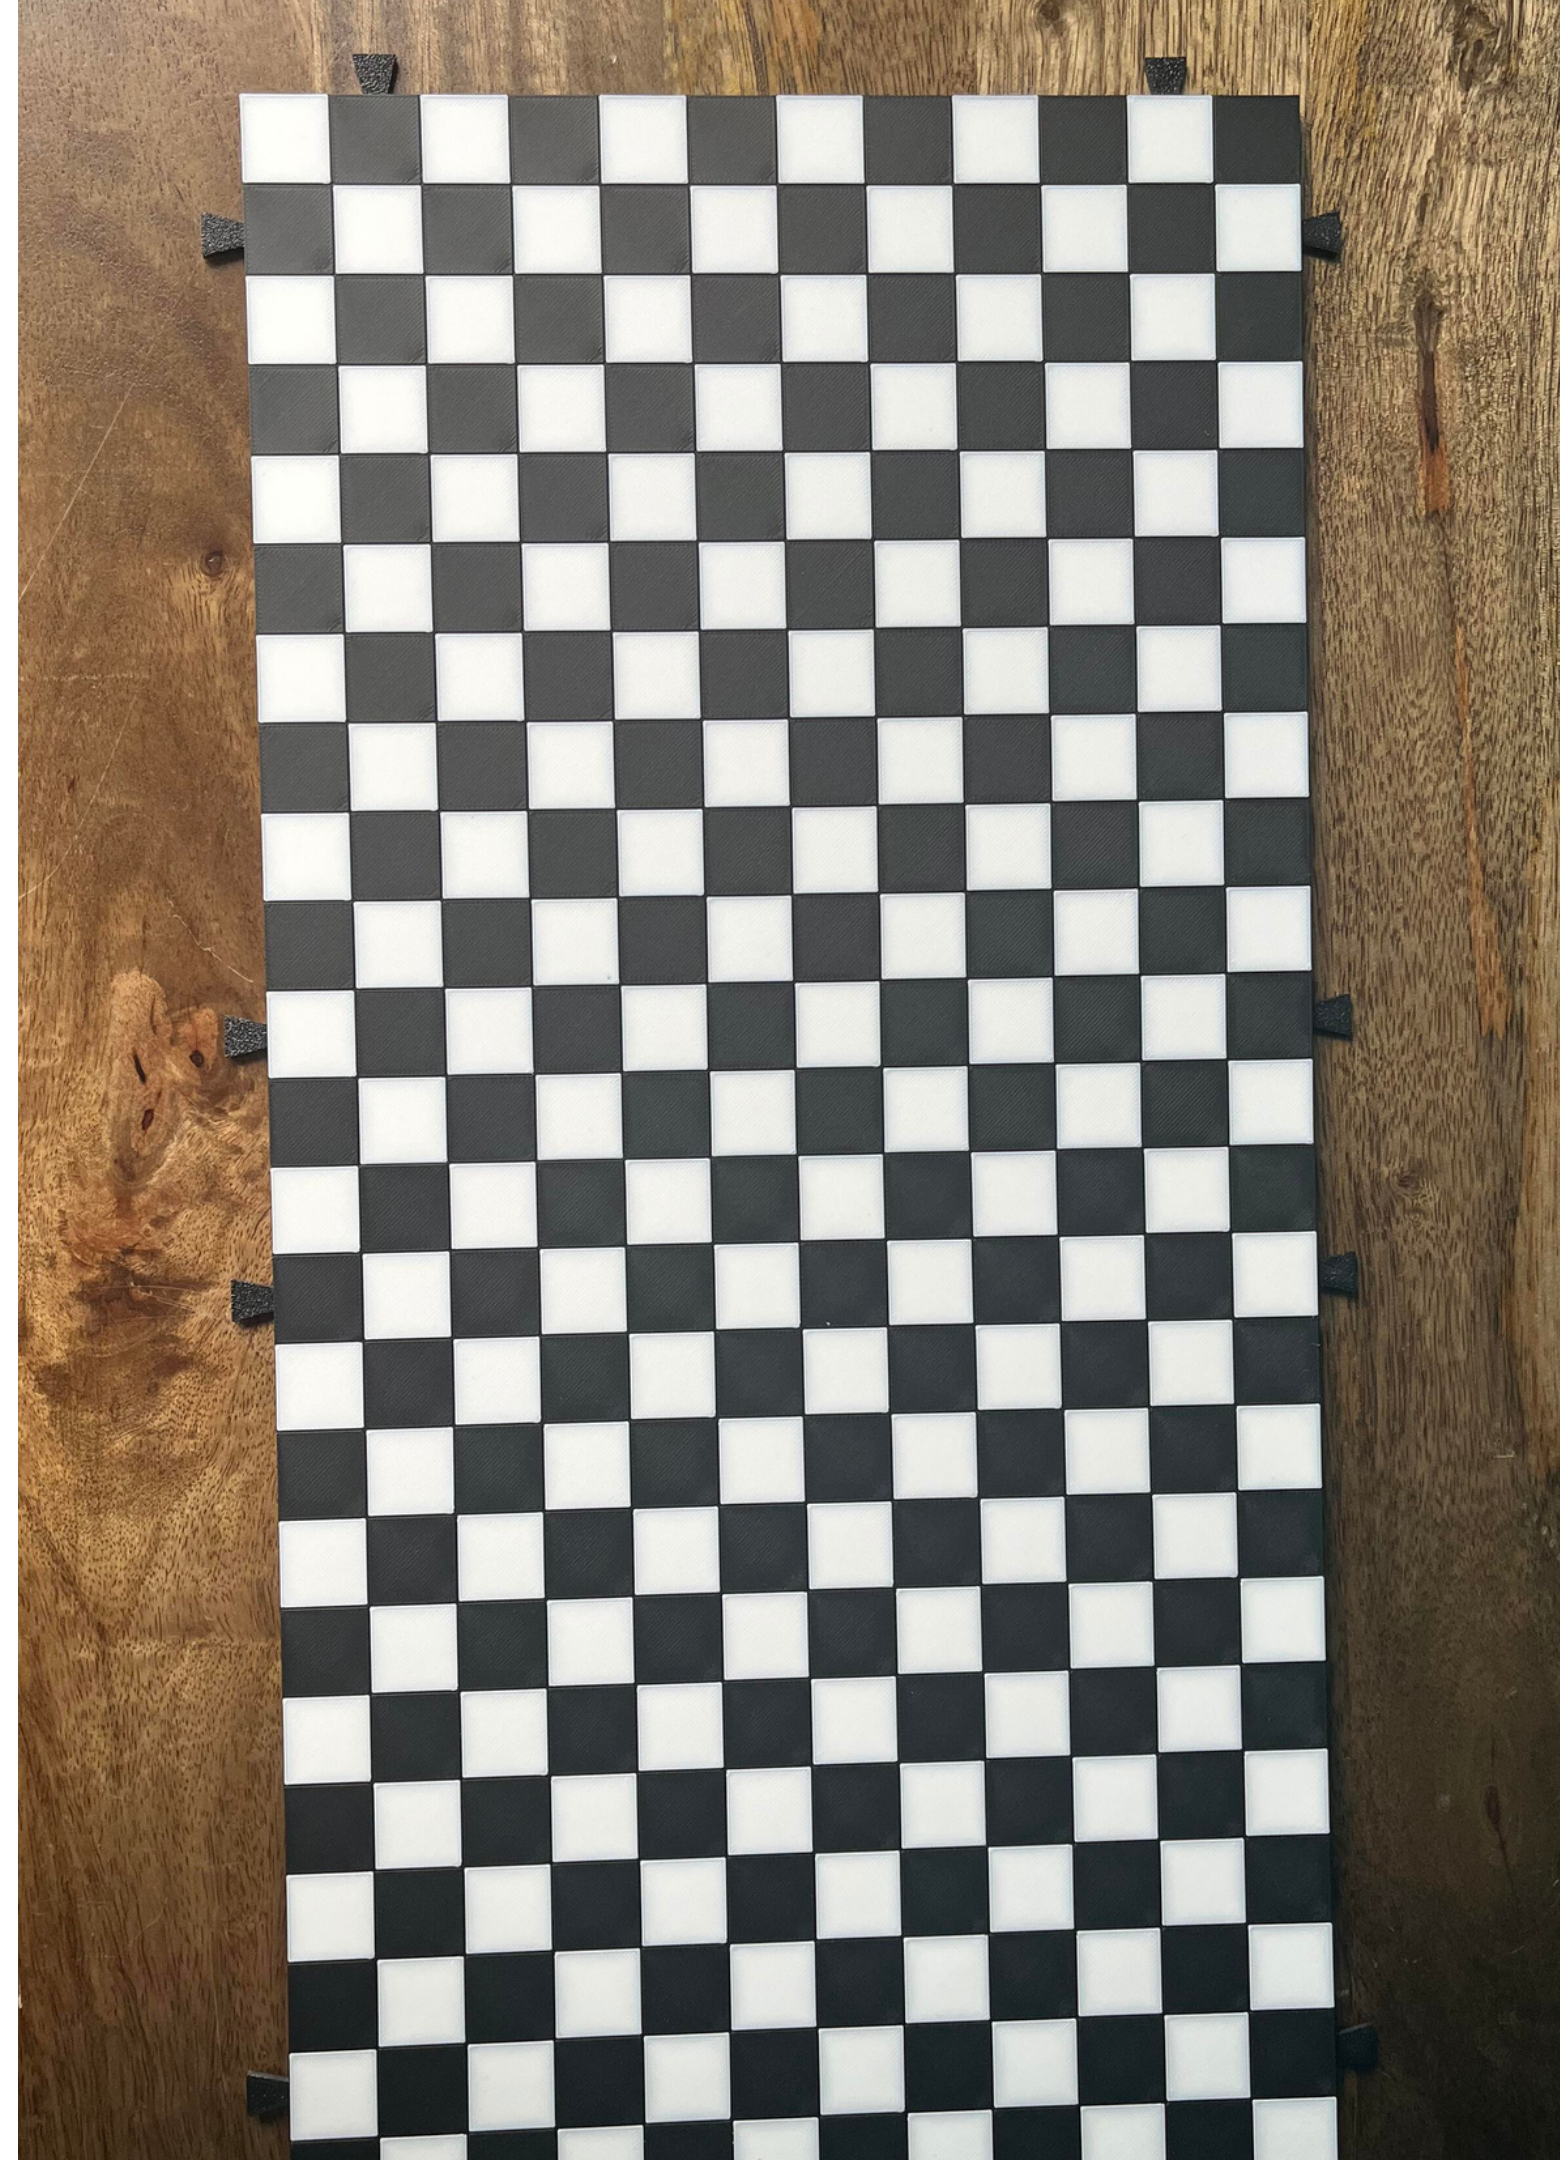


STEP 3

ATTACH THE FLOOR ADAPTERS

With the floor face-up, fit the white floor adapters onto the edges where the walls will stand. These adapters raise the wall panels and lock them to the floor.

Instruction: Slide a floor adapter onto each dovetail tab along the wall-facing edges. Use the adapters that match your wall color. Leave the remaining edges open for the floor end pieces.

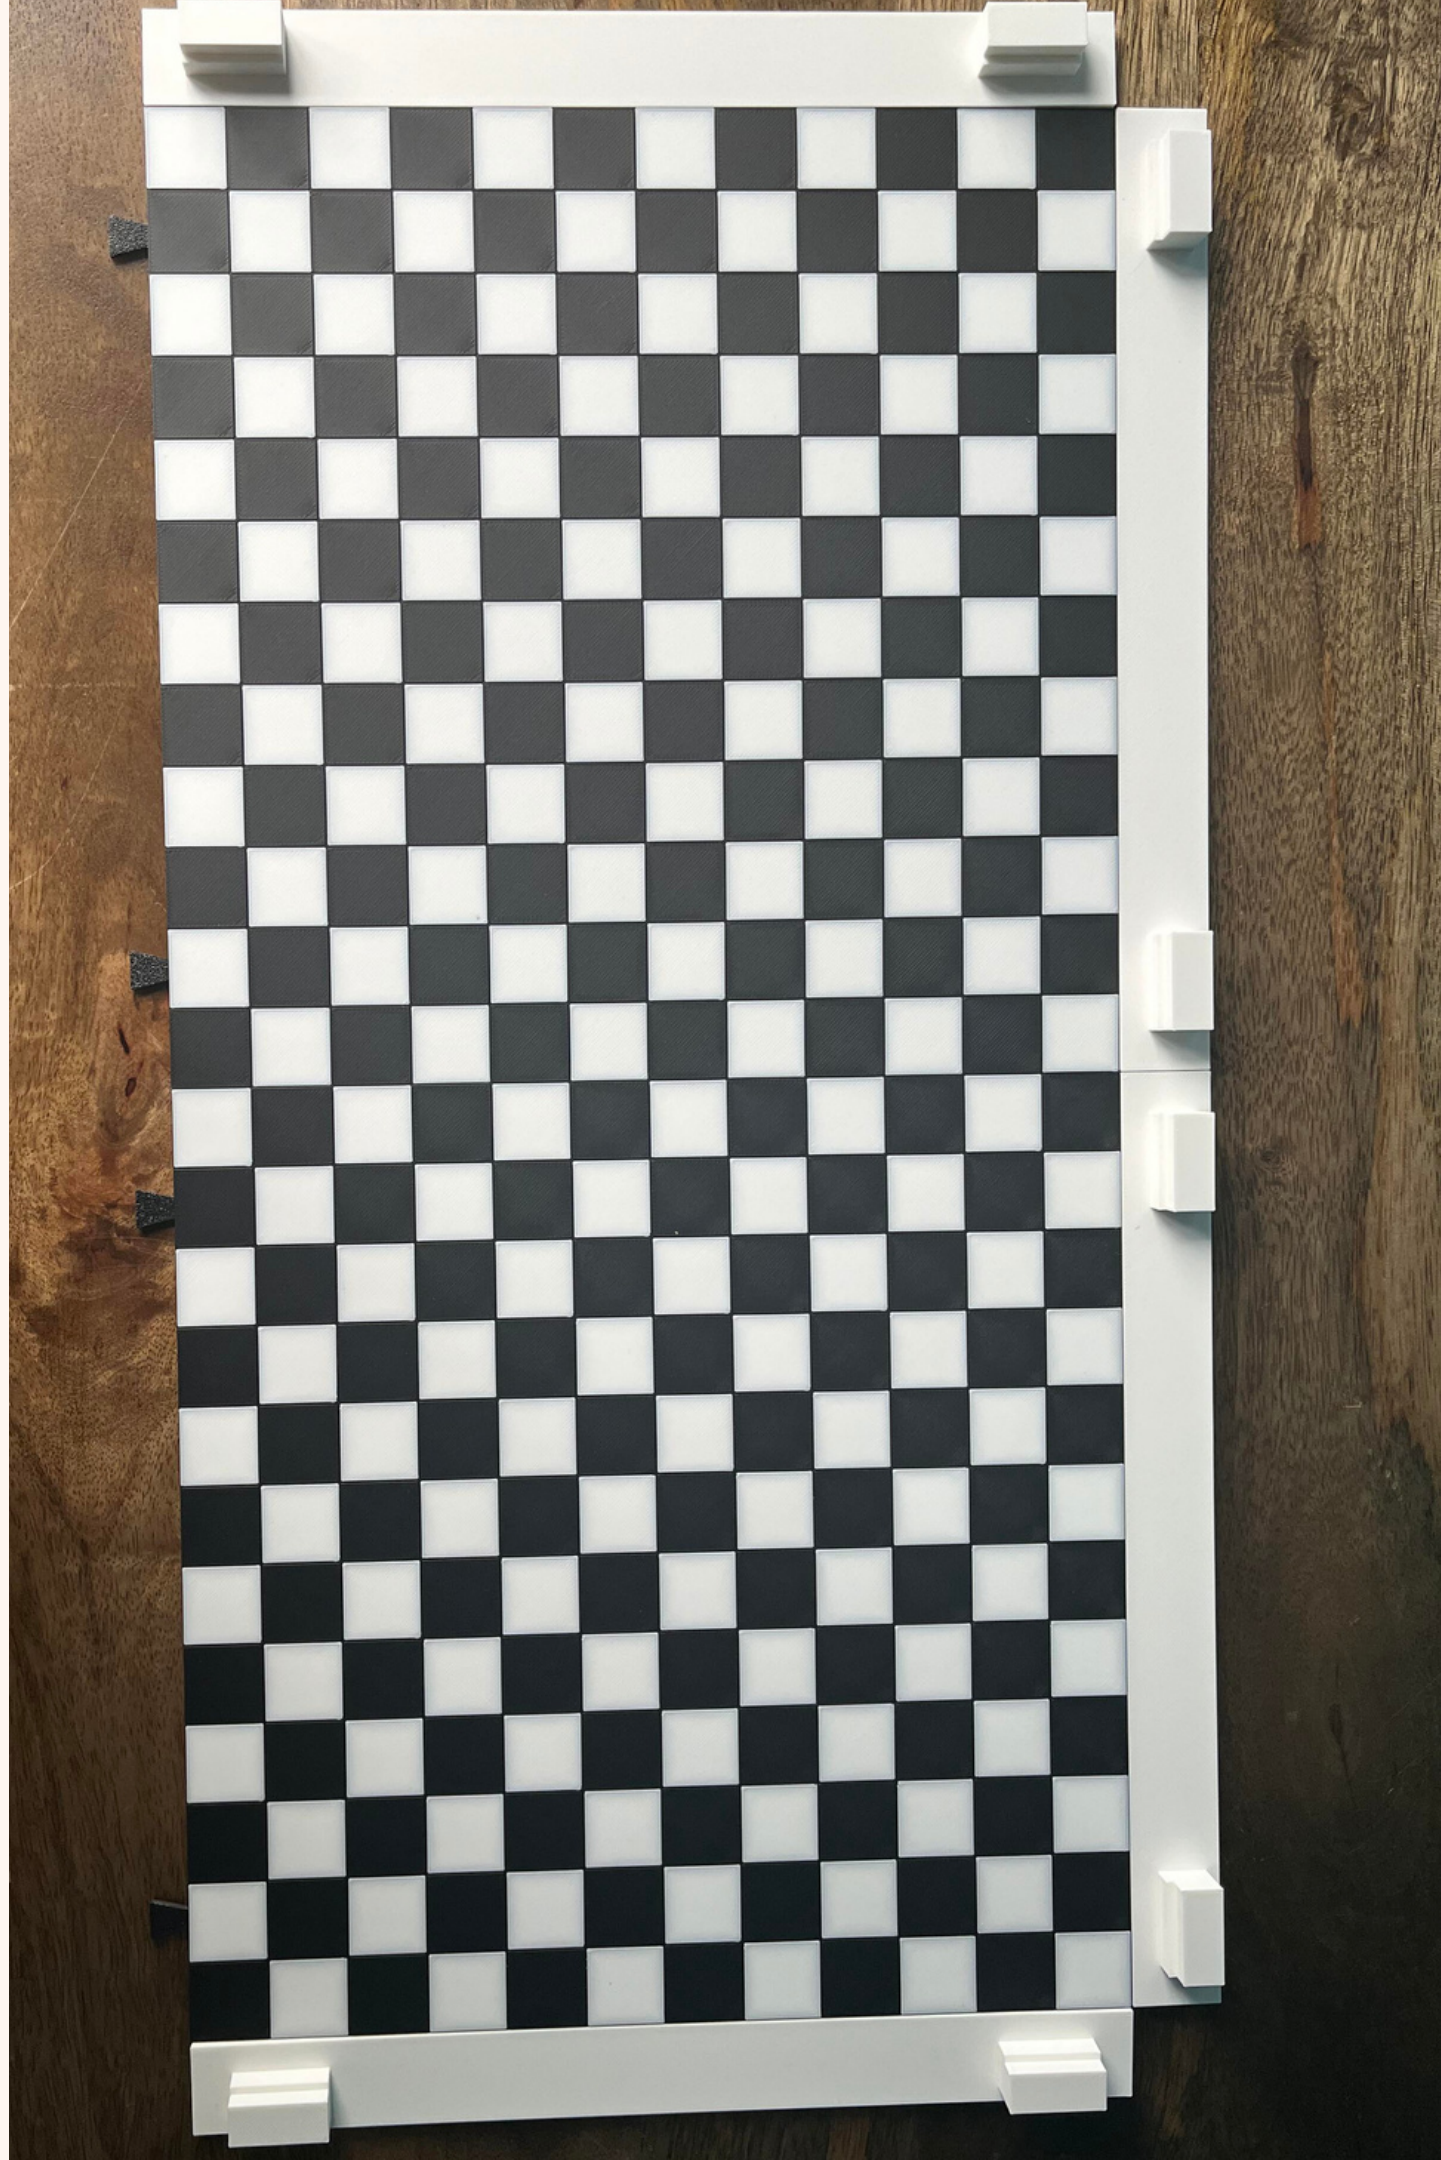

STEP 4

ADD A CONNECTOR TO THE FLOOR END PIECE

The floor edge already has its connectors from Step 1. On the floor end piece, add a connector only at the point where it joins the floor.

Instruction: Fit a connector into the joining slot of the floor end piece. Use the connector that matches the color of the floor's underside.




STEP 5

ATTACH THE FLOOR END PIECE

Flip the floor end piece over and connect it to the open edge of the floor. The floor is now complete on all sides, framed with floor adapters and the end piece.

Instruction: Turn the end piece face-up and push it onto the floor's connectors until it sits flush.

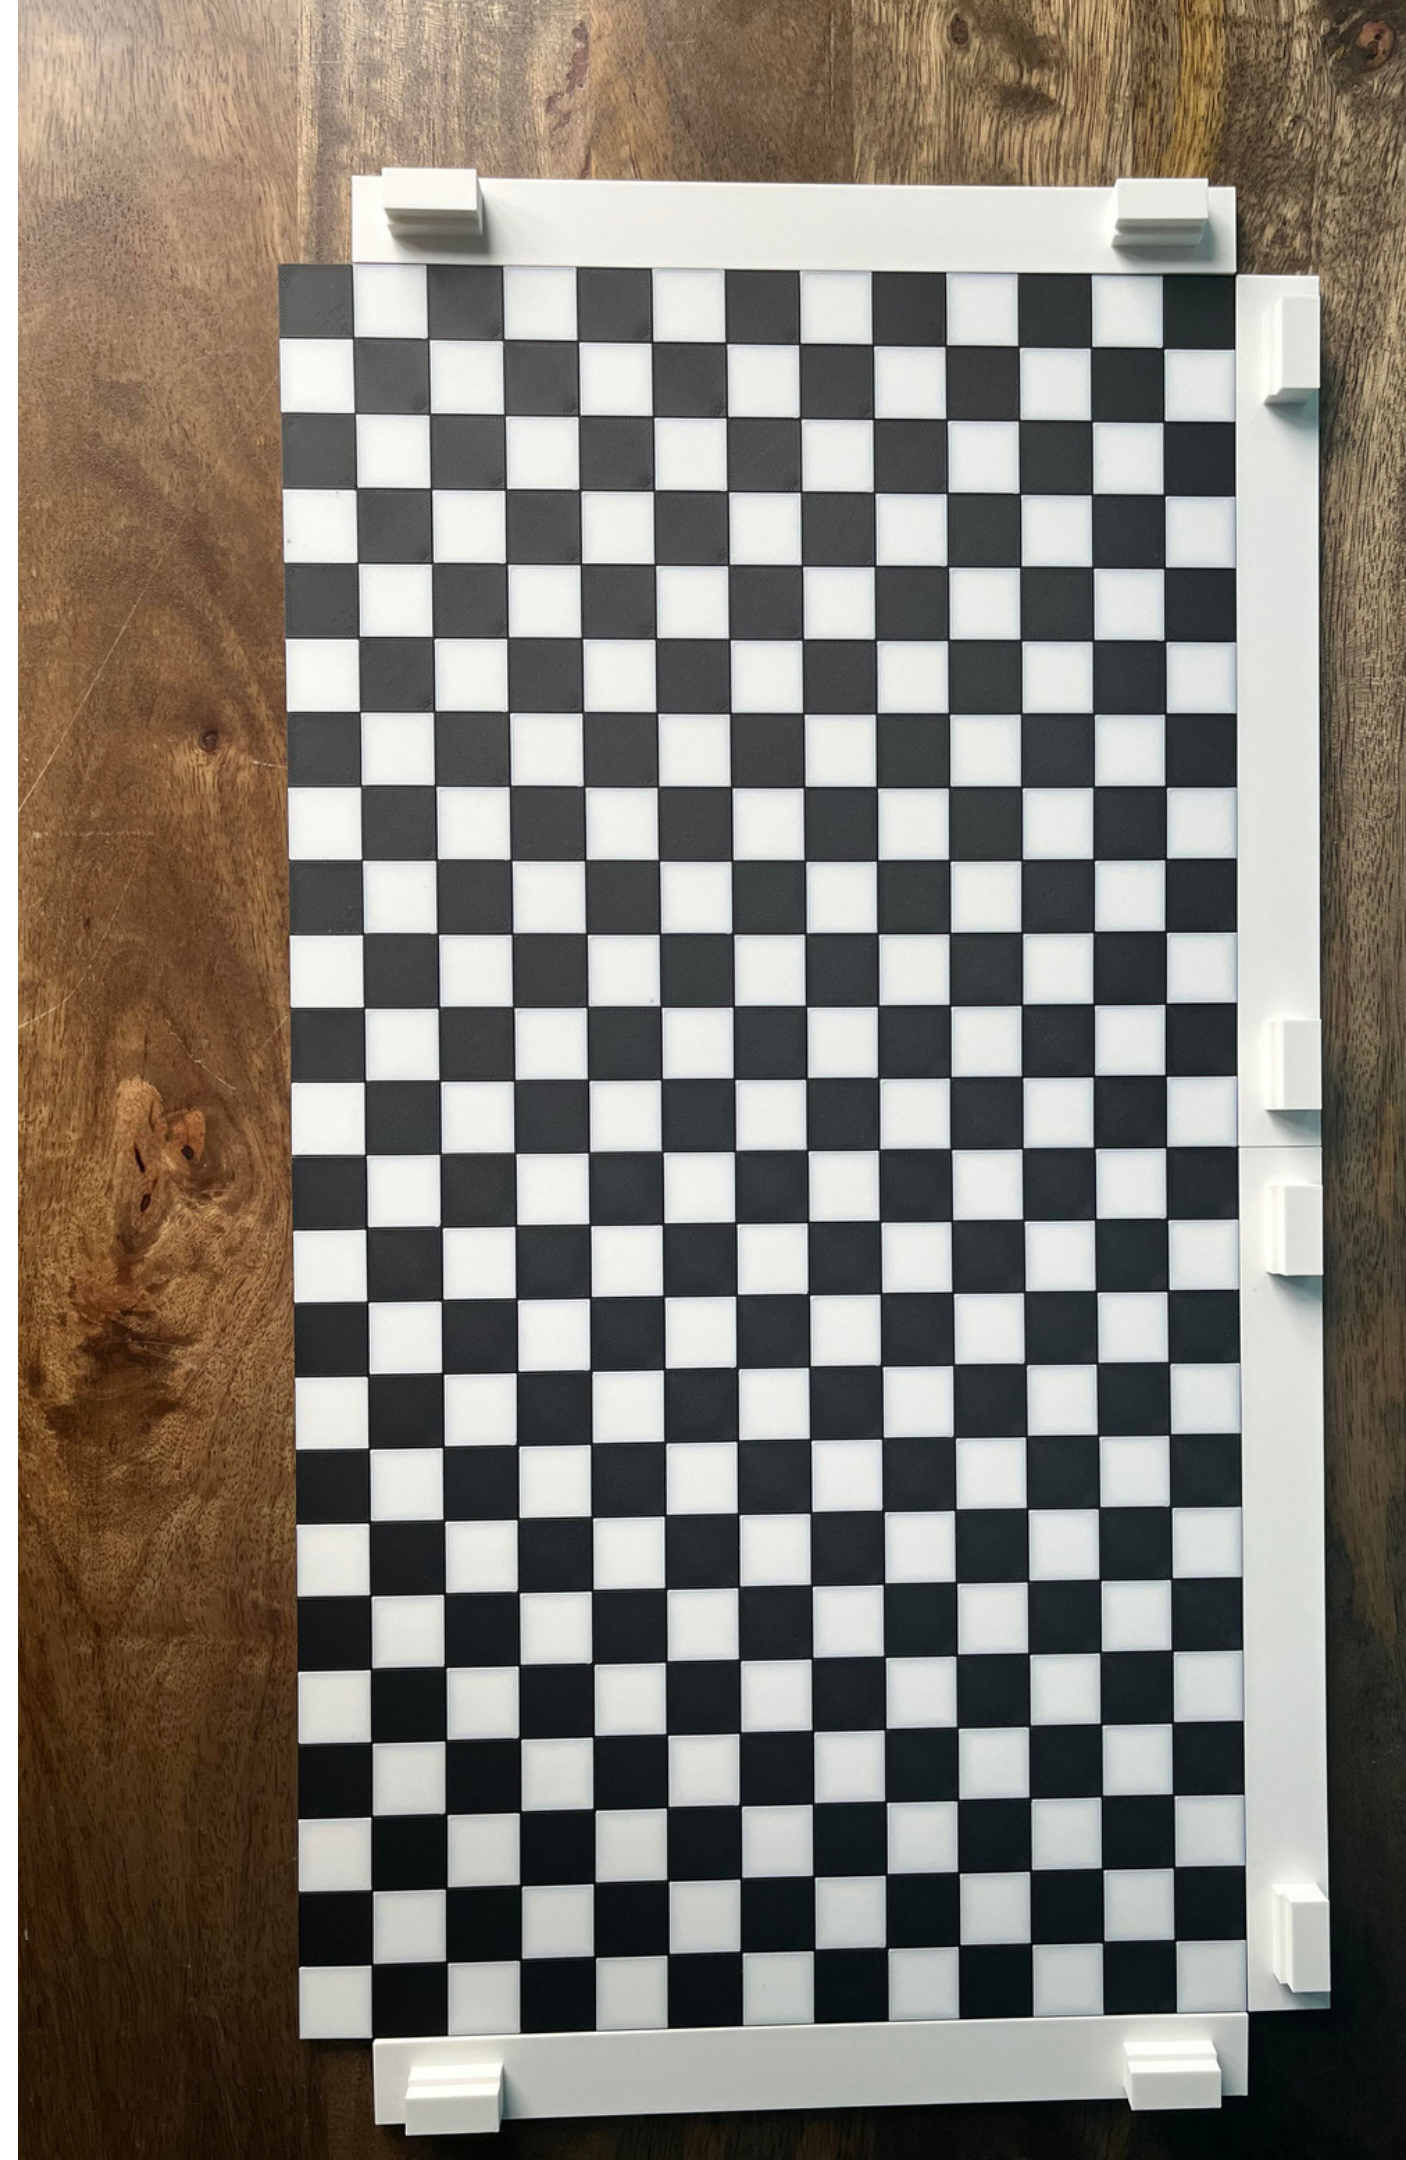

STEP 6

PLACE THE WALLS

Stand the four wall panels upright and slot them onto the floor adapters along the edges of the floor. The panels lock into the adapters to form the room's walls.

Instruction: Lower each wall onto its floor adapters until it sits firmly in place. Arrange the panels in any layout you like — the configuration is fully up to you.




STEP 7

CONNECT THE WALL PANELS

Where two wall panels meet, fit connectors into the dovetail slots on the back to join them. This locks the panels together into one solid wall.

Instruction: Insert a connector into each bow-tie slot along the seam between panels. Use the connectors that match your wall color.

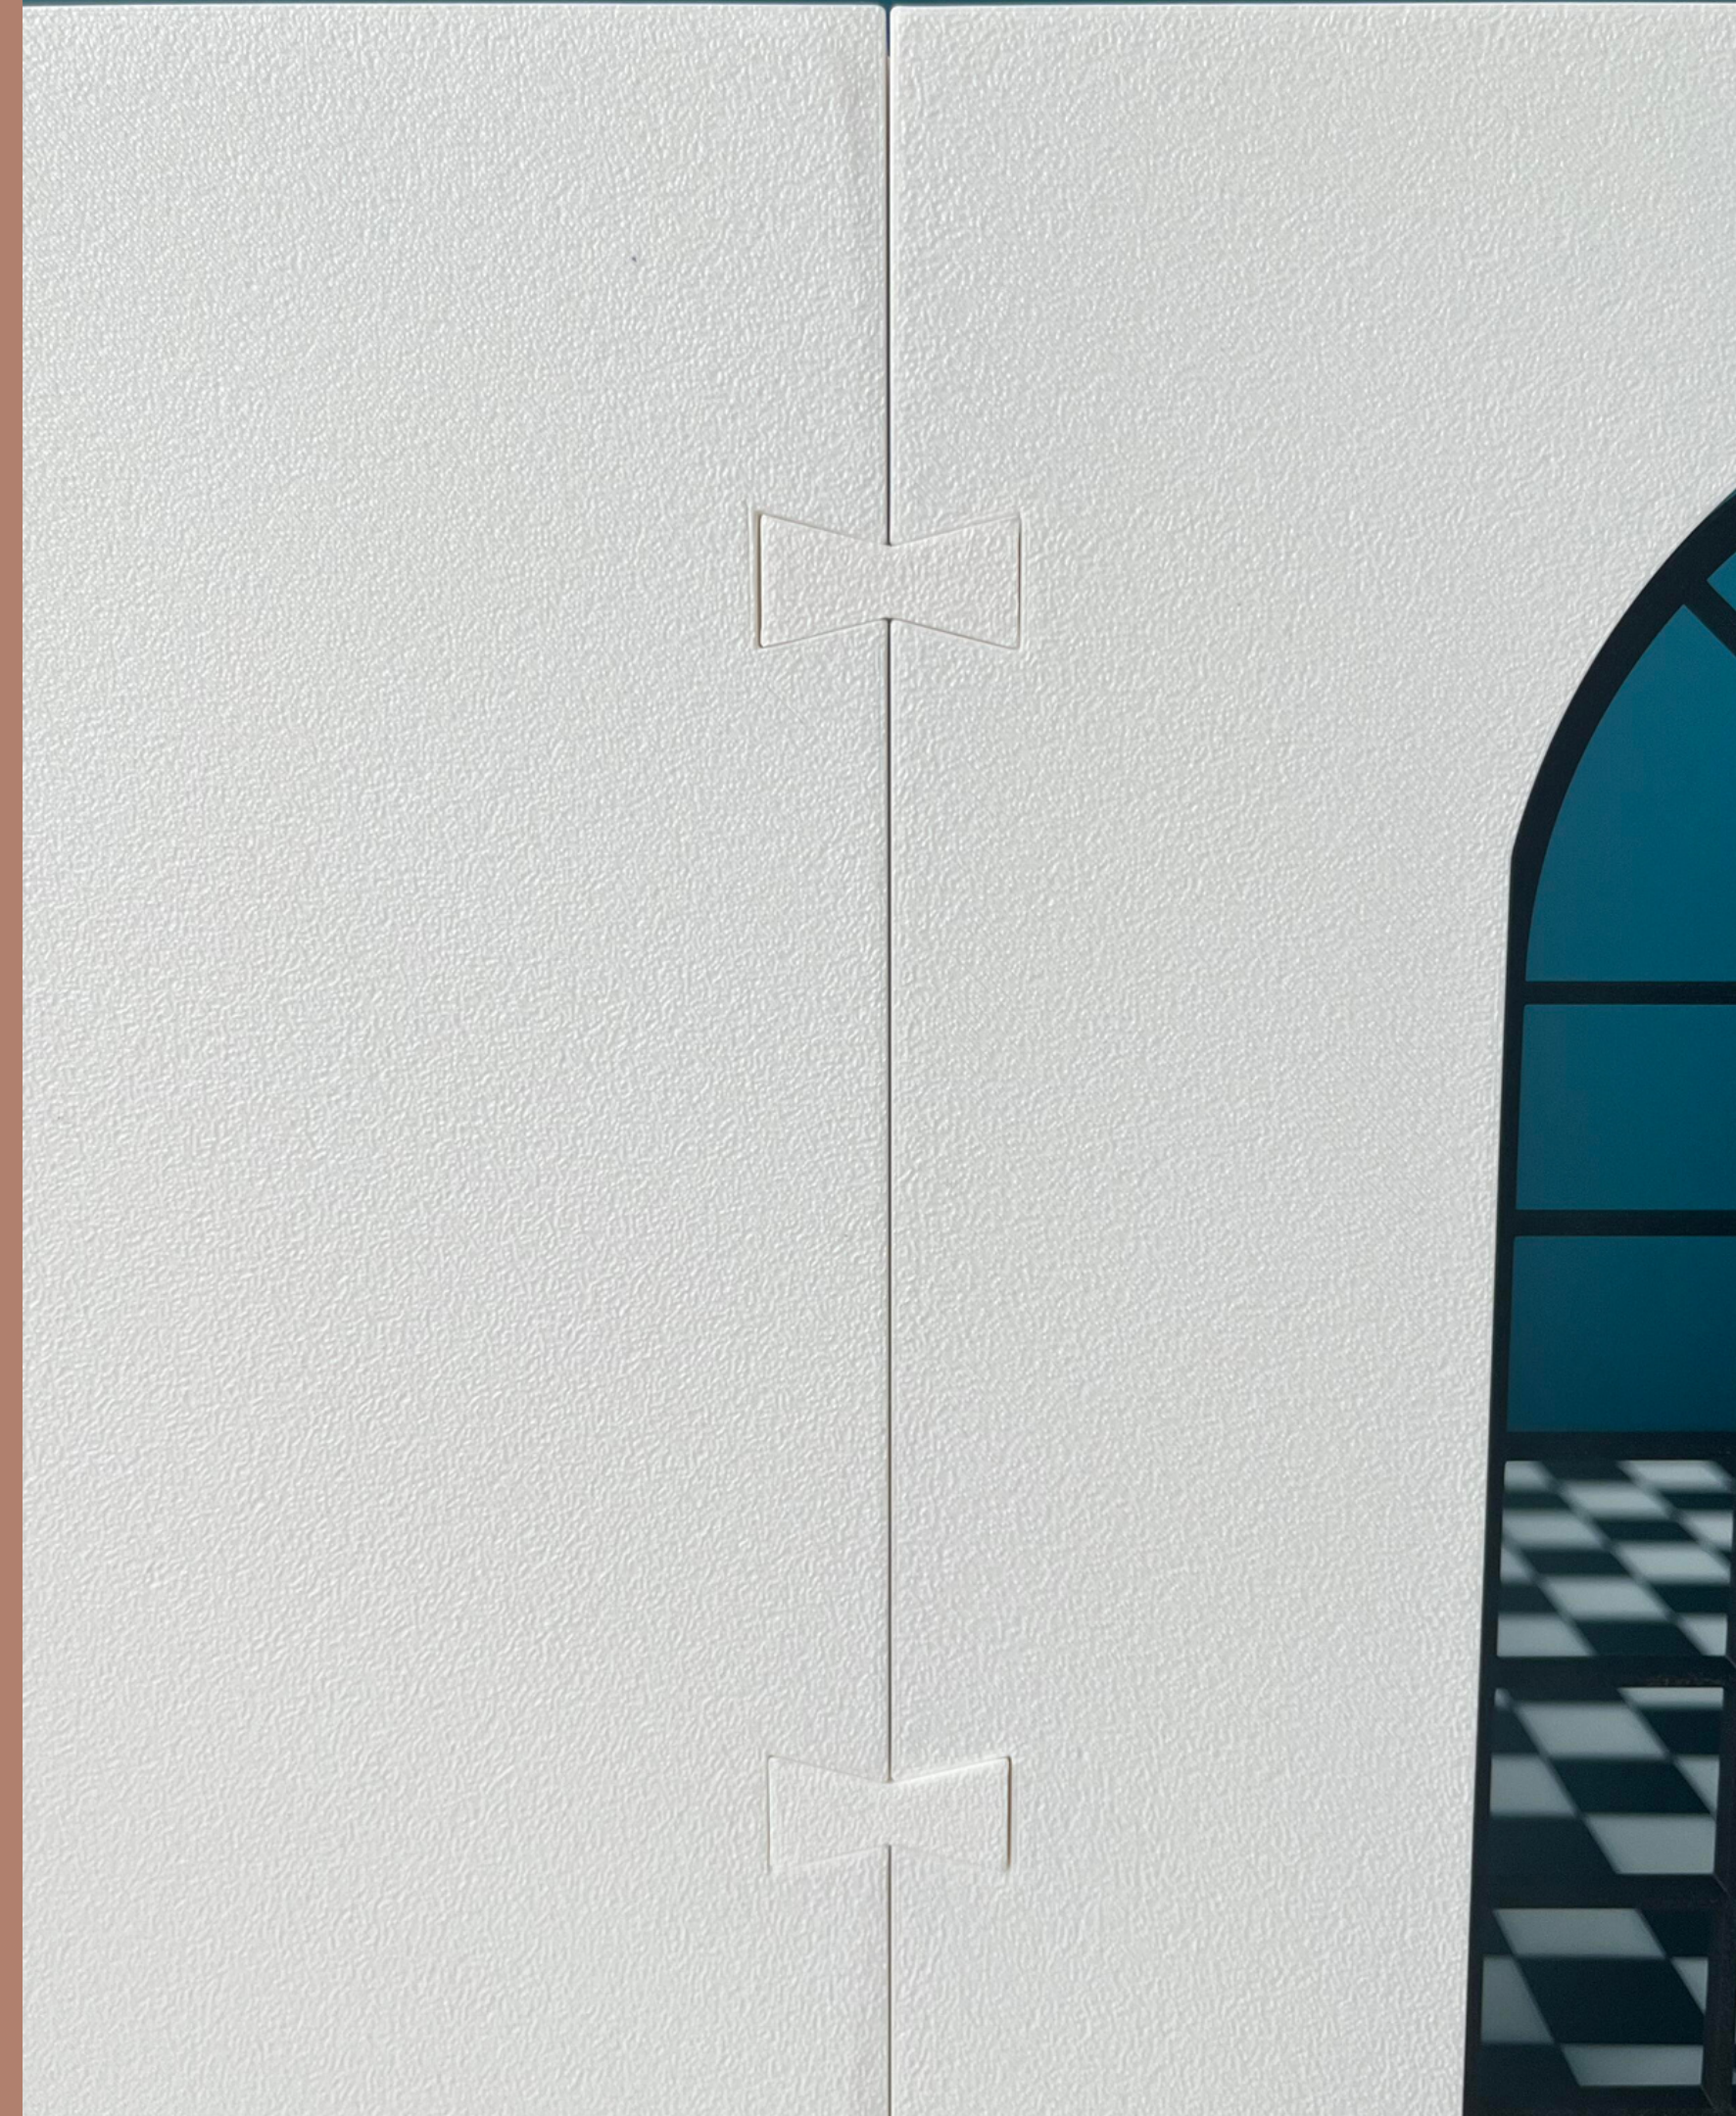

STEP 8

PLACE THE INSIDE CORNER ON ITS BASE

Take the inside corner and set it onto the supplied riser block. The block raises the corner piece so it lines up with the walls and floors.

Instruction: Fit the open underside of the inside corner piece over the raised stud on the base block until it sits level.



STEP 9

PLACE THE CORNER

Place an inside corner connector at each corner where two walls meet. It wraps around the joint, running the cornice and skirting seamlessly around the turn.

Instruction: Set the corner connector in place against both walls.



STEP 10

LOCK THE CORNER

Secure the corner connector to the walls with connectors in the dovetail slots.

Instruction: Insert a connector into each dovetail slot to lock the corner connector to both wall panels.




STEP 12

PLACE THE END PIECE ON ITS BASE

Take the end piece and set it onto its riser block, the same way as the corner connector.

Instruction: Fit the open underside of the end piece over the raised stud on the base block until it sits level.

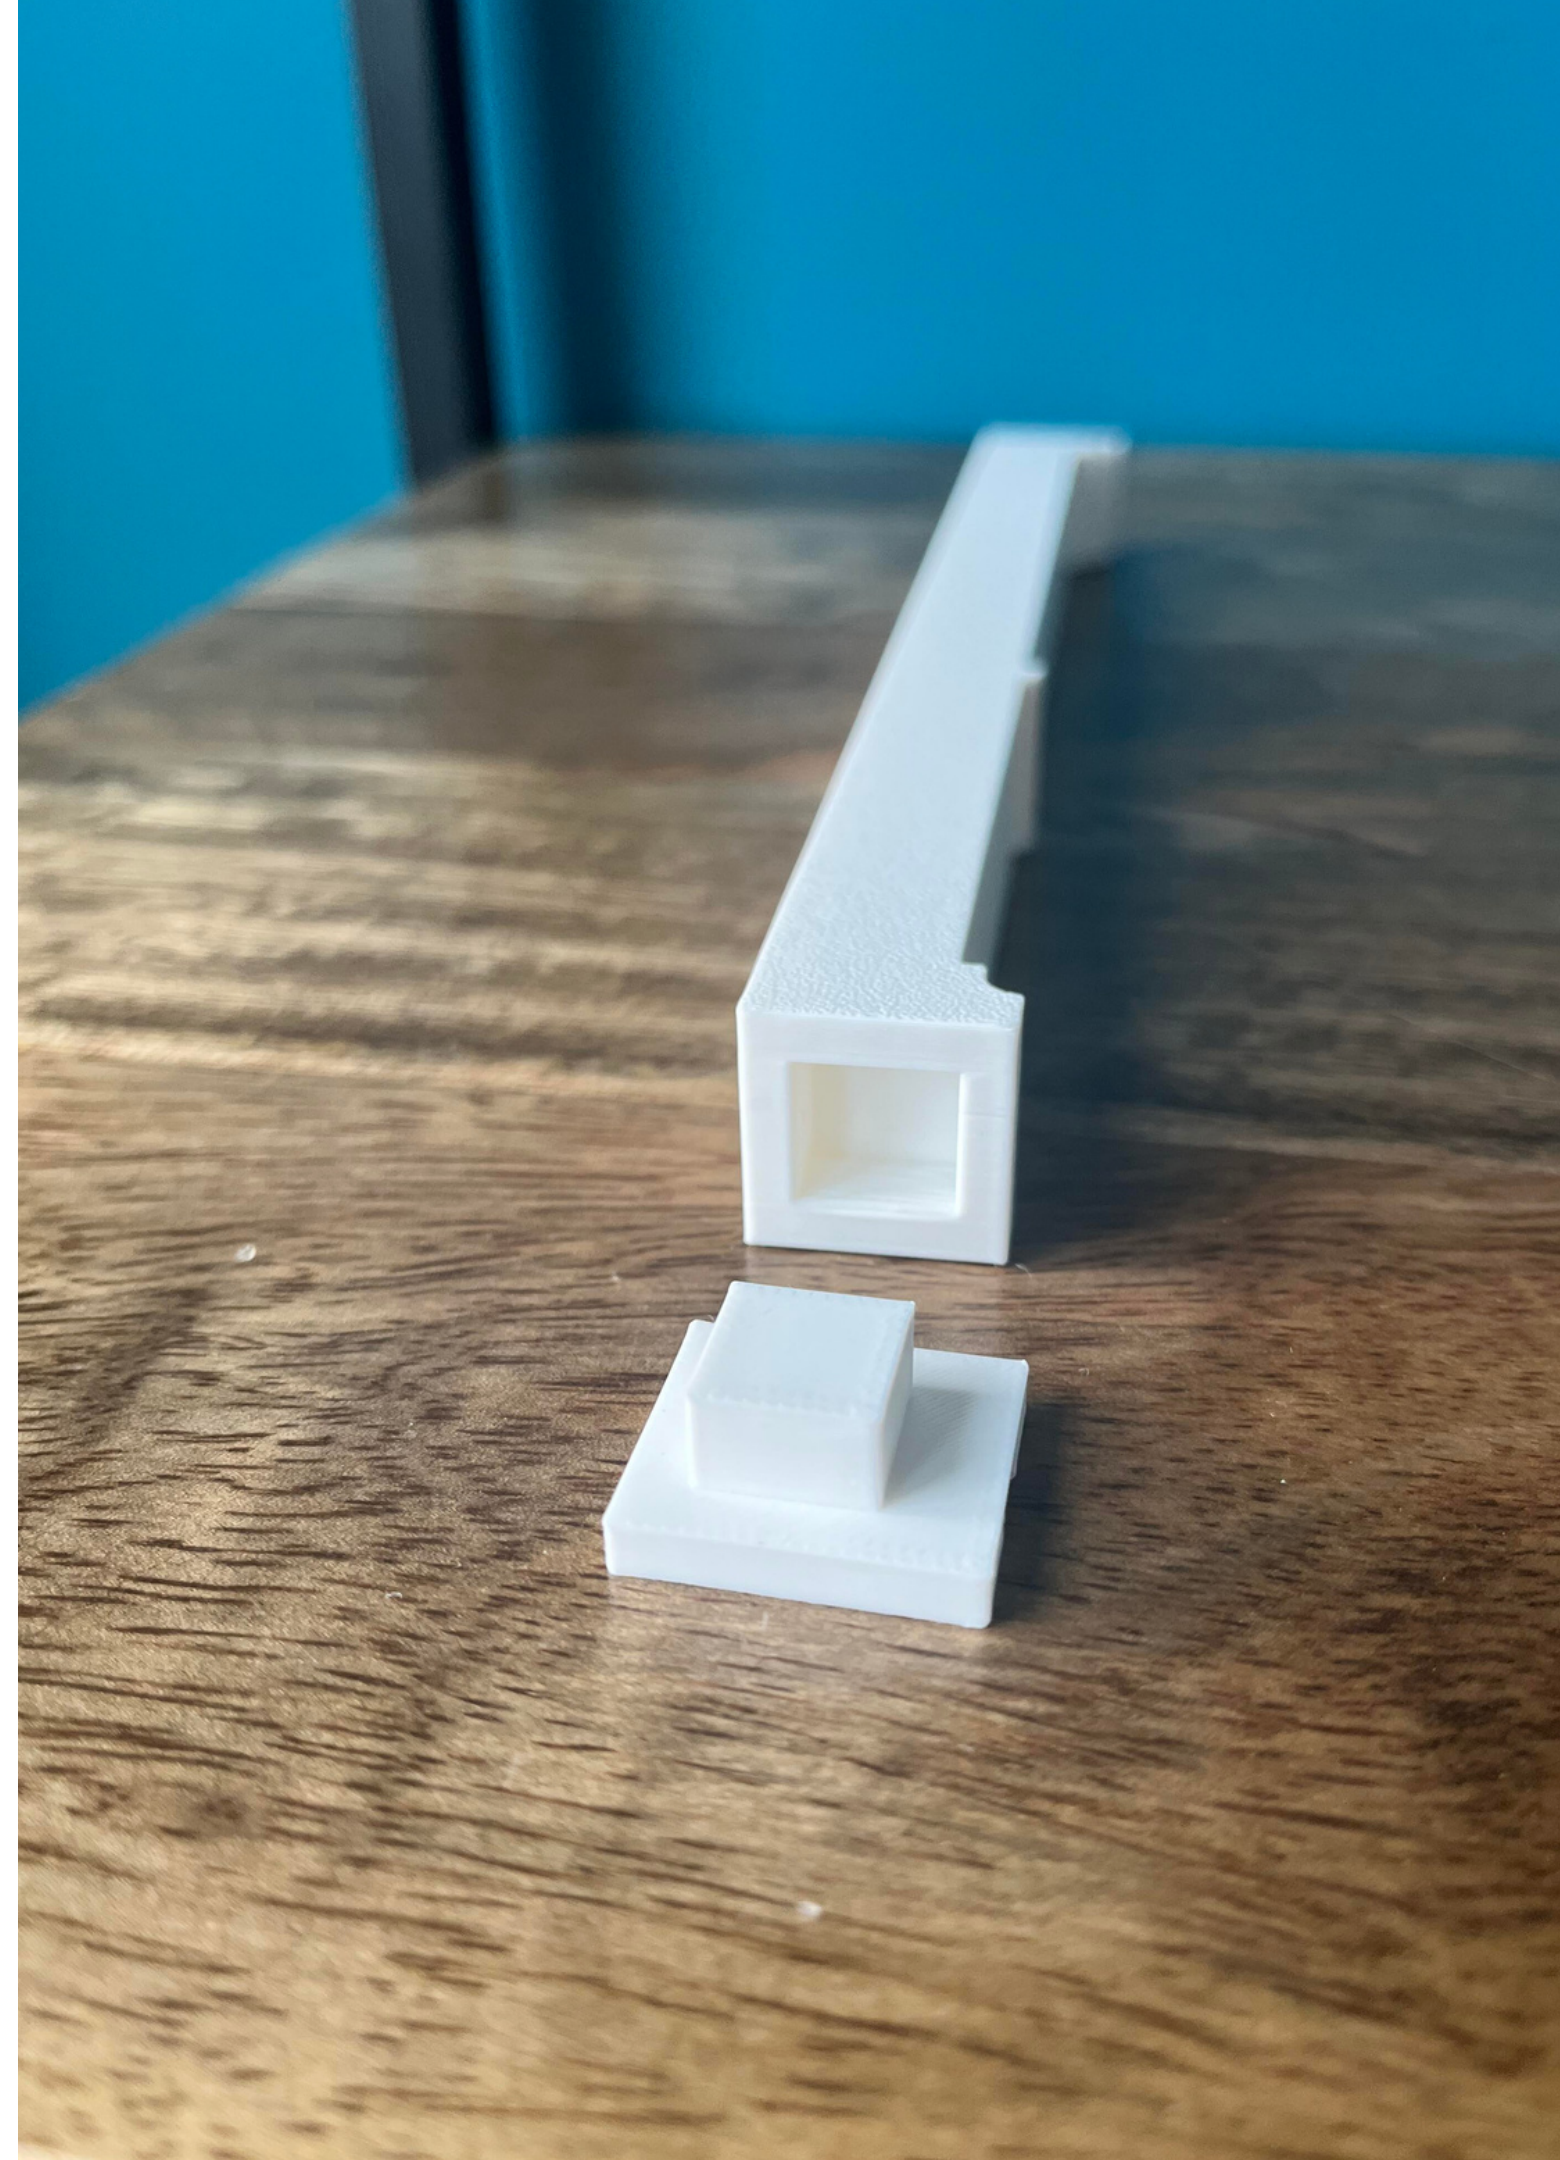

STEP 13

FIT THE END PIECE TO THE WALL AND FLOOR

Place the end piece against the open edge of the wall, resting on its base. Connect it on both sides: to the floor at the bottom and to the wall panel alongside it.

Instruction: Set the end piece in place, then lock it with connectors in the dovetail slots on both the floor side and the wall side.



STEP 13

YOUR ROOM IS COMPLETE

That's it, your room is fully assembled and ready to display or style.

Every panel, corner, and end piece is locked in place on the finished floor.

Because the design is modular, you can expand it anytime with extra walls, corners, and floor tiles to reconfigure or grow your scene.



Thank You

We hope you enjoy your new room. Every set is part of one modular system so your current set already combines with our other panels, windows, doors, corners, and floor tiles to expand or restyle your scene.

A couple of tips:

- The connectors hold everything firmly on their own. For a permanent build, add a small drop of glue in the dovetail slots.
- Parts unclip just as easily, reconfigure your layout whenever you like.

Want to know what your set can grow into or have an idea for a custom build? Get in touch via www.layered-living.nl and we'll happily think along.

We'd love to see what you create. Share your build and tag @LayeredLivingNL, or leave a review to support our small shop.